Arm length 350mm Maximum payload 4kg

YK350XGP

Ordering method

YK350XGP-150

No entry: None F: With tool flange

S

RCX340-4

Specify various controller setting items. RCX340 ▶ P.566

■ Specifi	cations					
			X-axis	Y-axis	Z-axis	R-axis
Axis	Arm length		200 mm	150 mm	150 mm	_
specifications	Rotation angle		+/-129 °	+/-134 °	-	+/-360 °
AC servo motor output		200 W	150 W	50 W	100 W	
Deceleration mechanism	Transmission method	Motor to speed reducer	Direct-coupled			
		Speed reducer to output	Direct-coupled			
Repeatability Note 1			+/-0.01 mm			
Maximum speed			5.6 m/sec 1.1 m/sec 1020 °/sec			1020 °/sec
Maximum payload			4 kg			
Standard cycle time: with 2kg payload Note 2			0.52 sec			
R-axis tolerable moment of inertia Note 3			0.05 kgm²			
Protection class Note 4			Equivalent to IP65 (IEC 60529)			
User wiring			0.2 sq × 10 wires			
User tubing (Outer diameter)			ф 4 × 4			
Travel limit			1.Soft limit 2.Mechanical stopper (X,Y,Z axis)			
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			

Weight

Note 1. This is the value at a constant ambient temperature. (X,Y axes)
Note 2. When reciprocating 25mm in vertical direction and 300mm in horizontal direction (rough-positioning arch motion).
Note 3. The acceleration coefficient is set automatically in accordance with the tip weight and R-axis moment of inertia settings.
Note 4. Do not use robots where the bellows section is directly exposed to water jet. Contact our distributor for information on drip-proof structure preventing liquid other than water.


■ Controller								
Controller	Power capacity (VA)	Operation method						
RCX340	1000	Programming / I/O point trace / Remote command / Operation using RS-232C communication						

Note. The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)

See our robot manuals (installation manuals) for detailed information

To set the standard coordinates with high accuracy, use a standard coordinate setting jig (option). Refer to the user's manual (installation manual) for more details.

Our robot manuals (installation manuals) can be downloaded from our website at the address below https://global.yamaha-motor.com/business/robot/

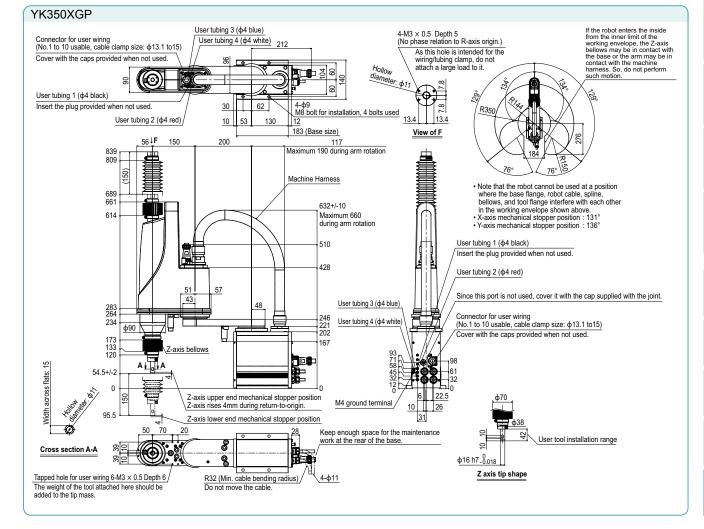

22 kg

