W: Wall mount (same as per external view U: Inverse wall mount (upside down)

YK700XGS

200: 200mm No entry: None 400: 400mm F: With tool flange

Specify various controller setting items. RCX340 ▶ **P.566**

Note 1. When installing the robot, always follow the specifications.

Do not install the ceiling-mount robot upside down or do not install the inverse type robot to a ceiling

Incorrect installation can cause trouble or malfunction.

■ Specifications						
			X-axis	Y-axis	Z-axis	R-axis
Axis	Arm length		300 mm	400 mm	200 mm 400 mm	-
specifications Rotation angle		е	+/-130 °	+/-130 °	-	+/-360 °
AC servo motor output		750 W	400 W	400 W	200 W	
Deceleration	Transmission	Motor to speed reducer	Direct-coupled			
mechanism	method	Speed reducer to output	Direct-coupled			
Repeatability Note 1		+/-0.02 mm +/-0.01		+/-0.01 mm	+/-0.004 °	
Maximum speed			8.4 m/sec 2.3 1.7 920 °/sec (wall mount m/sec 480 °/sec (inverse wall mount			
Maximum payload		20 kg (Standard type), 19 kg (Tool flange mount type)				
Standard cycle time: with 2kg payload Note 2			0.42 sec			
R-axis tolerable moment of inertia Note 3			1.0 kgm ²			
User wiring			0.2 sq × 20 wires			
User tubing (Outer diameter)			ф 6 × 3			
Travel limit			1.Soft limit 2.Mechanical stopper (X,Y,Z axis)			
Robot cable length			Standard: 3.5 m Option: 5 m, 10 m			
Weight			Z axis 200 mm: 50 kg Z axis 400 mm: 52 kg			
Note 1. This is the v	ralue at a constar	nt ambient temperature. (X,Y	'axes)			

Note 1. I his is the value at a constant ambient temperature. (X,Y axes) Note 2. When reciprocating 300mm in horizontal and 25mm in vertical directions. Note 3. The acceleration coefficient is set automatically in accordance with the tip weight and R-axis moment of inertia settings Note. Please consult YAMAHA when connecting other tubes and cables to the self-supporting machine harness.

■ Controller							
Controller	Power capacity (VA)	Operation method					
RCX340	2500	Programming / I/O point trace / Remote command / Operation using RS-232C communication					

The movement range can be limited by changing the positions of X and Y axis mechanical stoppers. (The movement range is set to the maximum at the time of shipment.)
See our robot manuals (installation manuals) for detailed information

Our robot manuals (installation manuals) can be downloaded from our website at the address below https://global.yamaha-motor.com/business/robot

